

KEY FINDER OL-5


Instructions for use

Introduction

This key finder can help you to find the lost keys, remotes, purse, eyeglass, cane, and other easily lost items quickly. With just one press on the color-coded button, the beep sound and flashes will lead you to find the lost items.

The key finder with base support is also a good display for your house. The transmitter is removable from base and can be carried with you to find lost items.

Product Diagrams

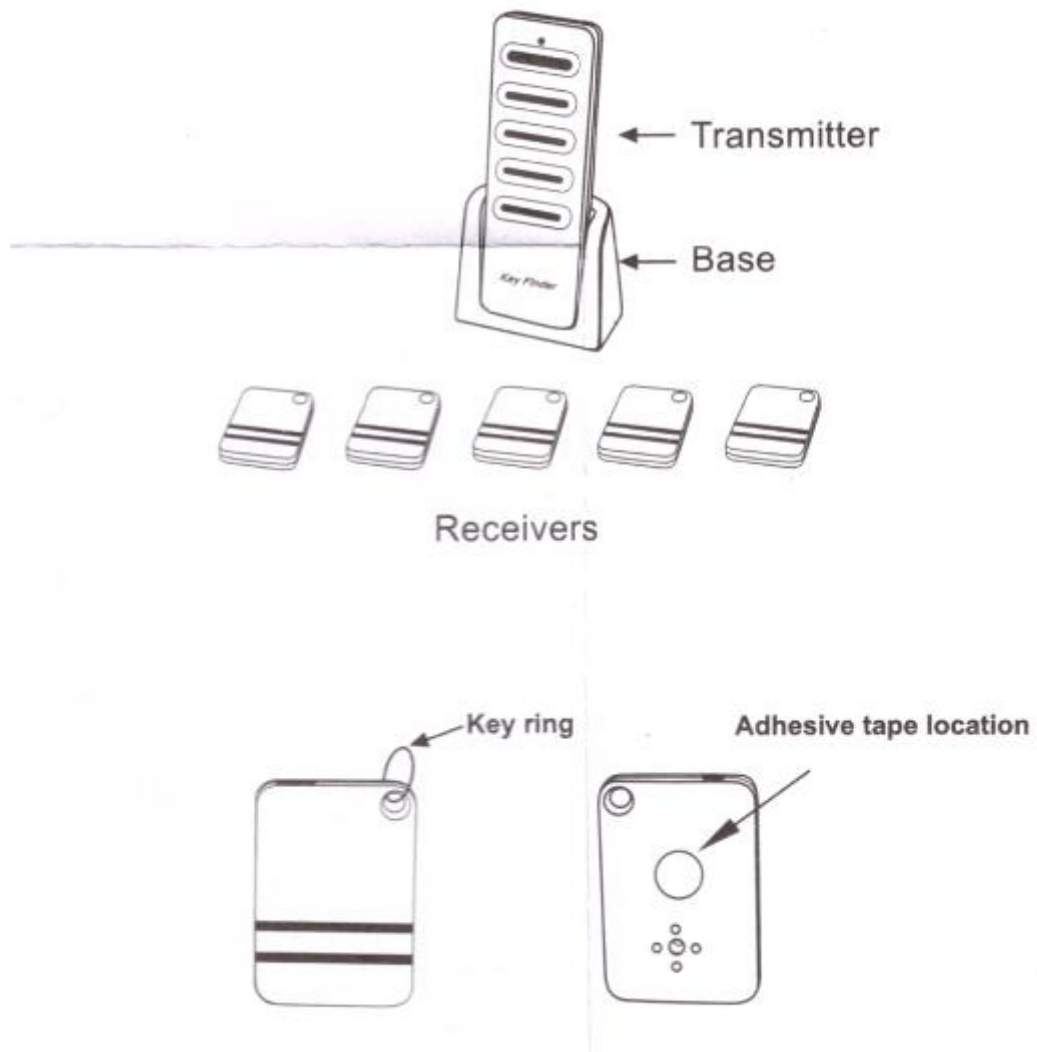

Batteries Installation


A. Transmitter

Follow the steps below to install batteries into the transmitter.

1. Remove the battery door located on the back of the transmitter.
2. Install the batteries according to the (+) and (-) marks inside the battery compartment.
3. Push the battery door back into place.

B. Receiver

1. Open the outer shell with the opening tool provided.
2. Replace CR2032 battery. Please mind the polarity of battery.
3. Close the outer shell.

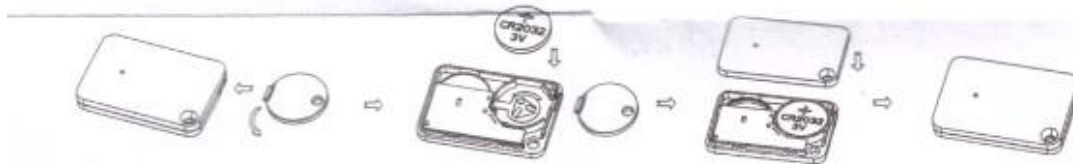

(Installing new batteries)

Warning:

- Do not mix old and new batteries.
- Do not mix Alkaline, standard (carbon-zinc) or rechargeable batteries.



Protect the environment and respect the law. Please handle the old battery properly. Never discard it by throwing into a garbage bin.

Operation

1. Attach the color-coded receivers to your frequently lost items with the key rings or double sided adhesive tape.
2. Press and release the corresponding color-coded button on the transmitter.
3. If the receiver is in range, it will beep and meanwhile the LED indicator will flash.
4. If no beep is heard, change your location or use new batteries and press the button again.

Specification

Model	Battery
KF05A	CR2032 * 6pcs (for transmitter & receivers, included)

Working range: 15-30 meters (open space)

Sound: 75-80dB

Frequency: 433.92MHz