

Pelham Radio Controlled Talking Watch – PELRC01/02

Instruction Manual

Your Radio-Controlled watch receives the UK atomic time radio Signal transmitted by the NPL transmitter in Cumbria.

It sets automatically and adjusts itself for Summer or Winter Time. The watch checks the time against the radio signal every night and makes necessary time adjustments. However, it can be set manually if you are in an area with poor radio reception or travelling overseas.



Button Functions

Time & date announcement

Press 2 O'clock button once to announce the time

i.e., *"The time is two fourteen pm"*

Press 2 O'clock button twice to announce the date

i.e., *"The date is Wednesday 15th December, year two thousand and twenty-one"*

Press 2 O'clock button three times to check the radio signal reception

If your watch has successfully updated the time it will announce *"UK time updated"* If the signal was not received successfully it will announce *"UK time not updated"* The watch will keep time as a normal watch until it next receives the signal.

If the time is not updated, it may help to position the watch near a window overnight to allow better signal reception. (See picture of how to place watch with metal strap for signal reception, metal strap should not be covering back of watch).

Alarm function

Press 4 O'clock button once to announce the alarm i.e. *"The alarm time is seven fifteen am"*

To set alarm

Press and hold 4 O'clock button for 5 seconds the watch announces *"Set alarm, press 2 O'clock button to set"*

Next press 2 O'clock button and the watch will announce *"Press 2 O'clock button to set hour, 4 O'clock button to confirm"*

Press 2 O'clock button again repeatedly until the desired alarm hour is announced i.e.

"Seven O'clock am" then press 4 O'clock button to confirm it, the watch will announce

"Press 2 O'clock button to set minute, 4 O'clock button to confirm"

Next Press 2 O'clock button again repeatedly until the desired alarm minute is announced. i.e., *"Fifteen minutes"*

Then press 4 O'clock button to confirm, the watch will announce the alarm time and if alarm is on or off. i.e., *"Confirm the alarm time is seven fifteen am"*

To switch alarm on or off

Press and hold 4 O'clock button for 5 seconds and the watch announces, *"Set alarm, press 2 O'clock button to set"* Then press 4 O'clock button again and the watch will announce *"Alarm on off, press 2 O'clock button to set"*

Next press 2 O'clock the watch announces *"Press 2 O'clock button to on, off, press 4 O'clock button to confirm"*. Then press 2 O'clock repeatedly until the watch announces the desired on or off setting then press 4 O'clock button to confirm.

The watch will announce whether the alarm is on or off. i.e., “Confirm *alarm time is two fifteen pm*”

Manual time setting

(Only to be used in areas or countries with no UK time signal)

Press and hold 4 O'clock button for approx. 5 seconds until watch announces “*Set alarm, press 2 O'clock button to set*” then press 4 O'clock button repeatedly until the watch announces “*Set Time press 2 O'clock button to set*”

Then follow the announced commands like alarm setting to set the desired time.

After the desired time is set and confirmed the watch will announce the new time and the hands will run fast and stop at the selected time.

Please note that the date cannot be set manually but will continue to be announced based on the last radio signal reception.

Manual radio signal reception

If the watch is not receiving the time signal it can be reset to receive the signal by holding in button 2 O'clock button until the second hand stops, then place the watch in a window, (see the picture of how to position the watch for best radio reception) until the second hand starts running again. To check the signal reception, press 2 O'clock button three times, if successful the watch will announce “*UK time updated*”



Correct radio reception position of metal strap

Battery Replacement

When the watch battery is low and needs replacing the second hand will stop every 2 seconds and there will be no voice announcement anymore.

The watch will stop at 12 O'clock when battery is dead.

The battery should be replaced by a Jeweller or watch repairer.

After battery replacement

The second hand will start to run when the crown is pushed in. when the second hand is exactly at 12 O'clock position pull out the crown.

The second hand must be exactly in line with 12 O'clock.

Now set the hour and minute hand to exactly 12 O'clock by turning the crown. Then push the crown in. Place the watch near a window to get radio reception, be careful to place it with metal strap away from the case back. The signal is strongest overnight so it may take some time until the signal is received.

Then the watch will set to the correct time.

Troubleshooting

Should the watch hands become accidentally moved from the correct time alignment, you can reset the hands as follows:

Wait until the second hand is exactly at 12 O'clock position and pull out the crown, then turn the crown to set all hands to exactly 12 O'clock.

Press 2 O'clock button for 5 seconds and then push in the crown. The watch hands will spin to match the internal time.

Terms and conditions of sale

This product is guaranteed from manufacturing faults for 12 months from the date of purchase. If you have any issues with the product then please contact your retailer



This product is CE marked and fully complies with all applicable EU legislation.