

TT240 User Manual

We reserve the right to upgrade the software and product and/or to make changes to this user manual without prior notice. The icons in this user manual may slightly differ from your phone, depending on the phone you purchased. All rights reserved.

Safety Instructions

This user manual includes important safety information. Please read below instructions carefully. It may be dangerous or illegal if you do not follow these instructions.

Pay attention to Traffic Safety

Obey local traffic laws and do not use the phone while driving. Using a cell phone while driving is dangerous and it is illegal in some areas. Radio frequency (RF) signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer of your vehicle for any equipment that has been added. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area.

Pacemaker Interference

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker in order to avoid potential interference with the pacemaker.

Turn Off Your Cell Phone in Medical and Health Care Facilities.

Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Switch Off on Airplanes

Using your device while flying in aircraft is prohibited. Switch off your device before boarding

an aircraft. The use of wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal

Accessories and Batteries

Use only the approved accessories and batteries. Please do not try to use with any product that was not manufactured for use with this phone. Please be sure the phone has been switched off before taking out the battery. Please dispose of scrap batteries properly according to the local

Cell Phone Should Be Turned Off Near Sites of Explosion.

Potentially explosive atmospheres include areas where you would normally be advised to turn off your véhicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations and in any area with a potentially explosive atmosphere and obey all signs and instructions. Observe restrictions on the use of radio equipment in fuel depots, storage, chemical plants or where blasting operations are in progress.

Using the Phone Correctly

Please use this phone in its normal intended position. Do not let children use the phone without supervision. Your phone contains small parts such as SIM card, which can be accidentally swallowed by a child.

Your Phone is Not Waterproof
This phone is not waterproof. Please do not expose your phone to wet weather or environment (such as rain, snow, seawater, etc.)

key and use the navigation keys to scroll to highlight a notice, press SELECT to view it.

The first time you power on the phone, you should set the following options: • Select the phone's language, then press the Right soft key to go next.

Set up your phone for the first time

· Select an enabled Wi-Fi, then press Right soft key to go next.

Even if no SIM card is installed, your phone will still power on and you will be able to connect to a Wi-Fi network and use some of the phone's features.

Power off your phone

To turn your phone off, hold down the Back/ End key and select Power off.

Charging the Battery

The battery can be charged when the phone is either on or off. Please ensure the battery is inserted into the phone before charging. The charging time is three hours.

To connect the charger:

- 1. Insert the cord into its port on the bottom panel of the phone
- 2. Plug the other end of the cable into either a computer USB socket or use any USB mains charger that runs at 240V.

To disconnect the charger:

- 1. Unplug the wall charger
- 2. Remove the cord from the phone.

Status bar and Notices

The Status Bar appears at the top of the screen. This displays notification icons, such as missed calls or received messages (on the left) and phone status icons, such as battery status (on the right), along with the current

The Notices Panel will display notifications when you miss calls, receive new messages or have upcoming events.

From the home screen press the left soft

Switch on Wi-Fi by going to Settings/Network & Connectivity/Wi-Fi select the available network and enter the password (if needed) press CONNECT when done.

The TT240 can be used as a WiFi hotspot by navigating to Settings/Network & Connectivity/Internet Sharing (will only work if you have mobile data).

KaiOS Store

Use the KaiOS store to search for and download games and applications to your TT240 phone. You will need a KaiOS login, a data connection or Wifi and enough spare memory space.

Battery Level Indication



EMPTY FULL

Low Battery Alert

The phone will sound an alert when the battery is low and display a message of low battery on the screen.

PLEASE NOTE: The TTfone TT240 does not come with a charger, you can use any USB mains plug or plug the cable into your PC or Laptop to charge the phone. If you do not have one of these you can purchase a charger from www.ttfone.com

Making/Receiving Phone Calls

To Make Calls

- 1. Enter a number and press the call key to call.
- To delete a digit, press the End key.

• To clear the screen, hold the end key once. You can also make calls directly from the contact list by going to Menu/Contacts select your contact, select phone number and the press CALL.

اللہ 🗖

Alarm

★ Aeroplane mode

New Email Message

Headphones are connected
Upcoming event

◀

■ Silent mode

Handset mode

Call Log

Access the call log to see your last dialed. missed and incoming calls go to menu/ Call Log, use the Navigation key to select a numbers and press CALL to call that number.

To Answer Calls

Network Signal Status

₩iFi Network

Battery Status

Missed Call

★ Bluetooth

Battery is charging

New Text Message

When your phone rings, press the Call key once to answer the call

To End a Call

To end a call, press the end key.

To Reject a Call

To reject the call without answering, press the end key when your phone rings.

To Redial a Number

- 1. Press the Call key, this will take you to all your recently dialed call list
- 2. Select the number you want to dial then press the Call key to call.

Conference Calling

You can create a third call connection during a call. During your call with the first participant, press Right Soft Key Options/Add call. You can either enter the phone number of the third participant, or press the Right Soft Key (Contacts) to select a contact from your Contact list. The first call will be automatically placed on hold.

· This feature is network dependent.

Making International Calls

- 1. Press the star key twice until a "+" character appears on the screen.
- 2. Enter the country code, area code and

phone number as instructed by your long distance network service carrier. 3. Press the Call key to call.

Changing the Volume during a Call

To change the volume during a call press the up or down navigation key. To change the volume of your media apps, ringtones, alerts and alarms, go to Menu/Settings/ Personalisation/Sound/Volume.

Ringtone volume

Your Phone

1. Navigation key: press to navigate

the Menu or press and hold to

key to see your notifications and

or enter a number and press the

use Google Voice Assistant.

2. Left soft key: Press the left soft

3. Call key: Press to access call logs

confirm menu actions.

call key to make the call.

4. Right soft key: press to access

the contacts phone book.

6. Number keys: Press to input

7. Star key: Hold down the star

8. Hash key: Press and hold to

activate Silent mode.

exit menus.

key for voicemail.

5. End key: Press and hold to turn

on and off the phone, press to

end calls, press to go back and

numbers, hold down for speed

key for 3 seconds to unlock the

keypad, press twice to input +

symbol for international calls.

Data is syncing

◆ Downloading data

Microphone muted

New Unread Notices

Vibrate mode

(1) Problem with sign in or sync

dial. Press and hold number 1

You can adjust the ringtone volume in Menu/ Settings/Personalisation/Sound/Volume. From here you adjust the volumes for the ff: Media. Ringtones & Alerts and Alarm.

Silent Mode

Simply go to Menu/Settings/Personalisation/ Sound/Volume and change Ringtones & Alerts to Silent or on your home screen hold down the hash (#) key until silent mode appears.

Simply go to Menu/Settings/Personalisation/ Sound/Volume and change Ringtones & Alerts to Vibrate or on your home screen hold down the hash (#) key until vibrate mode appears.

Aeroplane Mode

Some locations may require you to switch off data connections. Instead of turning off your device, you can set it to Aeroplane Modé. From the Home Screen press the Navigation Key Up to display the shortcuts menu select the aeroplane symbol and press SELECT. Flight mode will disconnect all your network data, Wi-Fi and connectivity connections. You can also access through Menu/Settings/ Network & Connectivity/Aeroplane Mode.

Data Roaming

With a mobile data plan from your network

Getting started

Remove the Back Cover

Open the battery cover carefully by prising open from the bottom left corner where you will find a small notch. Install the SIM card and battery. For availability and information about using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.

Note: The SIM card and its contacts are easily damaged by scratches or bending, so please be careful when handling, inserting, or removing the card. **Note:** Keep all SIM cards out of the reach of

small children. 1. Ensure the phone is switched off and the charger is disconnected before removing the

battery. 2. With the back cover removed, install the SIM card by sliding it into the nest and under the metal holding plate. Ensure the angled corner is on the upper left hand side. (To remove the SIM card, gently press on it and slide it out of its nest.) Please note you can only use a standard SIM card and not a Micro and Nano SIM. You can also install a micro SD memory card into the slot above the SIM slot. 3. Install the battery into the battery

slot, ensuring that the three metallic stripes on the battery align with the three metallic prongs in the battery slot. 4. Put on the battery cover. Ensure the cover is completely closed and the matching sound

(click) could be heard. 5. Plug the phone in to charge it fully.

operator you will be able to access internet feature apps when not in a Wi-Fi zone.

of data plans. **Shortcut Kevs**

From the Home Screen, you can use shortcut keys to easily jump to certain useful functions. Press the left navigation key to access these shortcuts on your home screen.

Contact your operator for more information

Transferring Media

Transfer your favorite music and pictures between your TT240 and PC. Connect your device to a PC with the USB power cable and go to Menu/Settings/Storage/USB Storage and select 'Enabled'.

Your device will be displayed as a removable device, showing the phone's internal storage. If a memory card is inserted, the microSD card details will also be visible. Copy the chosen files to the device.

To Lock and Unlock the Keypad

In order to prevent accidental dialling, the phone is set to auto lock the keypad after 60 seconds of no use. To unlock the keypad press and hold the Star key for 3 seconds. If you wish to lock the keypad manually again hold down the star key for 3 seconds. To adjust the length of the auto lock go to Menu/Settings/Personalisation/Display/ Screen Timeout.

KaiOS Account

Register and Log in to your KaiOS account to set up the anti-theft feature, this allows you to lock and erase your phone remotely if lost or stolen.

Go to Menu/Settings/Account/KaiOS Account/Create Account and follow the on screen instructions.

Messages (SMS)

Micro SD

SIM Card

Test messaging is easy with the TT240 keypad, simply press a key repeatedly until the desired letter is shown. Type 0 for a space. Special characters or punctuation by pressing *. To switch between lower and upper case press #. To enter a number, press and hold a number key. Writing methods can vary between different applications.

Writing and Sending a Message

Go to Menu/Messages and select NEW. In the "To" field press the # key three times to be able to enter numbers, or select add to choose a contact from your contact list. Write the message using the keypad, the end key will delete the last character. Select SEND.

Contacts

Store all your contact information in the phone book and easily access all your friends and family. Go to Menu/Contacts or use the shortcut pressing the right soft key on the home screen.

- 1. Select NEW and choose to save your contact on the phone or the sim card
- 2. Enter the name and phone number of the contact
- 3. press SAVE

Transfer Contacts from your old phone To add contacts from your Gmail or outlook account or your memory card go to Contacts/ Options/Settings/Import Contacts.

Sort contacts

You can either sort your contacts by first or last name. Contacts/Options/Settings/Sort Contacts.

Speed dial settings

Set speed dial numbers to the keypad numbers keys. Press and hold down a



number key to call the saved phone number. Go to Contacts/Options/Settings/Set Speed Dial Contacts.

In Case of Emergency contacts or ICE You can add up to 5 ICE contacts. Contacts/ Options/Settings/Set ICE Contacts. ICE Contacts will be displayed at the top of your contact list, so these can be accessed very easily

APPS

Please note some of the following apps need an internet connection to use their services. It is recommended to use Wi-Fi connections when available to reduce costs for data traffic. Contact your service provider for detailed subscription costs. To access the APPS from the home screen press the center key to display the app tray, use the navigation key to select your chosen app.

Internet

The TT240 comes with a simplified Internet browser you can use to access your favourite websites. Go to Menu/Browser select SEARCH, enter the web address and select GO. The navigation key will act as a mouse you can control with the pointer on the screer

WhatsApp

Navigate to WhatsApp application and set up vour account, you will need Wifi or Data and a phone number to set up and use WhatsApp. For help setting up visit www.ttfone.com/ support. Currently, voice and video calls are not supported in WhatsApp.

Facebook

Navigate to Facebook application and set up your account, you will need Wifi or Data and Facebook login to set up and use the app.

with a 4 digit code of your choice. Follow the on screen instructions for each menu.

Change Ringtones

Change ringtones by going to Settings/ Personalisation/Sound/Tones/Ringtones.

Change Wallpaper

Change Wallpaper of the home screen by going to Settings/Personalisation/Display/ Wallpaper.

Screen Timeout

If your device is idle for a period of time, the screen will turn off to save battery power. To set a longer or shorter time go to Menu/ Settings/Personalisation/Display/Screen Timeout.

Memory

The TT240 has 4GB internal memory. For extra memory space you can install a micro SD card (which is sold separately) no larger than 32GB.

Accessibility Options

Navigate to Menu/Settings/Device/ Accessibility to find helpful features like colour invert, captions, mono audio, volume balance and hearing aid compatibility.

Restore Settings

Go to Menu/Settings/ Device/Device Information/Reset Phone to restore the phone back to factory settings. If you restore the factory data, your device will reset to the settings that were configured at the factory. All of your personal data from the internal device storage, including account information, the system and application settings, and any downloaded applications will be erased. Resetting your device does not erase any system software updates that have

For help setting up visit www.ttfone.com/ support.

Google Assistant

Google Assistant is Google's voice controlled smart assistant that allows you to search for information online, open apps on your phone, send messages, etc. To access Google Assistant press and hold the Center soft key for 3 seconds. Speak into the microphone of the device clearly and follow the on screen

You can gain access to a tailored feed of relevant news based on your location and category, go to Menu/News.

KaiWeather

Stay up-to-date with reliable weather forecasts. Simply go to Menu/KaiWeather and set your city.

OR Reader

The app will automatically recognise the QR code and takes you where you need to go.

This is a quick access to google browser to get your needed information on-line.

You can have access to a multiples kind of games on the KAIOS store, section "Games".

YouTube

YouTube is an online video-sharing application where users can upload, view, and share videos. Available content includes video clips, TV clips, music videos, and other content such as video blogging, short original videos, and educational videos. It supports a streaming function that allows you to start

been downloaded or any files on a microSD

Troubleshooting

are advised to follow the instructions below:

Before contacting the service Centre, you

You are advised to fully charge the battery

for optimal operation. Avoid storing large

may affect its performance. Use the FOTA

(Firmware Over The Air) Upgrade tool to

update your phone's software. To access

Update phone, press Settings\Device\Device

My phone can't be switched on or is frozen

reinstall your battery, then turn your phone

2. Check the battery power level, charge for at

My phone has not responded for several

2. Remove the battery and re-insert it, then

when not in use, and make sure you don't

accidentally turn off your phone when

1. Make sure you are using a TTfone battery

2. Make sure your battery is inserted properly and

clean the battery contact if it's dirty. It must be

and the charger cable from the box.

inserted before plugging in the charger.

locking it by pressing the Back/End Key

1. Restart your phone by pressing and

1. Check whether your phone is locked

holding the Back/End Key

My phone turns off by itself

Check the battery charge level.

My phone can't charge properly

1. Check the battery contacts, remove and

amounts of data in your phone as this

card, such as music or photos.

Information\Software Update

least 20 minutes.

restart the phone.

minutes

watching videos almost as soon as they begin downloading from the internet.

Google Maps offers satellite imagery, road condition, topographic map and route planning for traveling by foot, car, or public transportation. By using this application, you can get your own location, search for a place, and get suggested route planning for your trips.

Email

You can use the TT240 to read and send email messages. Add an email account by going to Menu/Email and follow the instructions. Write an email by going to Menu/Email and select COMPOSE, in the "To" field type the email address, add your subject and email content and press SEND. You can also add attachments, reply and forward emails and even search for emails using the options menu.

Camera

Your mobile phone is fitted with a camera for taking photos and shooting videos:

- · Store them in your "My files".
- Send them in a whatsapp message to a mobile phone.
- · Customise your Home screen.
- Transfer them by data cable or memory card to your computer.

To take a picture navigate to Menu/Camera and press the center key to capture the image. The TT240 is also fitted with a front camera for taking selfies and using for video calls. To change the camera to the front press the right soft key for Options and select which Camera you want to use.

3. Make sure that your battery is not completely

the battery charger indicator on the screen.

5. When abroad, check that the voltage input

My phone can't connect to a network or "No

3. Check with your operator that your SIM card

5. Try connecting at a later time if the network

1. Make sure that the internet access service of

4. Make suré charging is carried out under

normal conditions (0°C to +40°C).

1. Try connecting in another location.

2. Verify the network coverage with your

4. Try selecting the available network(s)

My phone can't connect to the Internet

2. Check your phone's Internet connecting

3. Make sure you are in a place with network

4. Try connecting at a later time or another

1. Make sure the SIM card has been correctly

2. Make sure the chip on your SIM card is not

3. Make sure the service of your SIM card is

1. Make sure you have dialled a valid number

your SIM card is available.

damaged or scratched.

Unable to make outgoing calls

and have pressed the call button.

is compatible.

operator.

is valid.

manually

settings.

coverage

location.

inserted.

available

Invalid SIM card

is overloaded.

service" is displayed

discharged; if battery power is empty for a long

time, it may take around 20 minutes to display

Take pictures with a timer by selecting Options/Self Timer in the camera app.

To view the photos you have taken go to Menu/Gallery.

Video

Take videos by going to Menu/Camera and then press the right navigation key. Use the center key to start and stop recording. To view the video recordings go to Menu/Video.

Use the sound recorder to record voice notes and messages by going to Menu/Recorder.

Play your favourite FM radio stations, using a wired headphone will give better reception. Go to Menu/FM Radio and click TURN ON. press the right soft key to scan for available stations. To turn off the FM Radio press the back button and then press TURN OFF.

Music files can be transferred from a PC onto your TT240 so you can listen to music wherever you are. Ensure that the USB storage has been enabled Settings/Storage tab/USB Storage/Enabled, then connect your phone to a PC using the USB cable. On the PC navigate to the USB drive and copy your music across.

Gallery

This is where you can view and manage your saved pictures by going to Menu/Gallery.

A handy torch light can be found at the top of the TT240. When on the home screen hold down the 0 key for 3 seconds to turn on the torch, hold it down again to switch off.

Clock

You can add more than 10 Alarms and you can also access timer and stopwatch. Go to Menu/Clock.

2. For international calls, check the country and area codes 3. Make sure your phone is connected to a

- network, and the network is not overloaded or unavailable 4. Check your subscription status with your
- operator (credit, SIM card valid, etc.). 5. Make sure you have not barred outgoing calls.
- 6. Make sure that your phone is not in aeroplane modé.

Unable to receive incoming calls

- 1. Make sure your phone is switched on and connected to a network (check for overloaded or unavailable network).
- 2. Check your subscription status with your operator (credit, SIM card valid, etc.).
- 3. Make sure you have not forwarded incoming calls.
- 4. Make sure that you have not barred certain calls
- 5. Make sure that your phone is not in Aeroplane mode.

I can't find my contacts

- 1. Make sure your SIM card is not broken. 2. Make sure your SIM card is inserted properly.
- 3. Import all contacts stored in SIM card to phone.

The sound quality of the calls is poor

- 1. You can adjust the volume during a call by pressing the Volume Up/down key.
- 2. Check the network strength
- 3. Make sure that the receiver, connector or speaker on your phone is clean.

When I select a number from my contacts, the number can't be dialled

- 1. Make sure that you have correctly recorded the number in your file.
- 2. Make sure that you have selected the country prefix when calling a foreign country.

Calendar

Use Calendar to create and manage events, meetings and appointments. Depending on vour synchronisation settings, the calendar on the device remains synchronised with the calendar on the web.

Open the calendar by going to Menu/ Calendar and press the left soft key to start adding a new event. Set the time and date and event details then press SAVE.

Notes

This is where you can make short text notes by going to Menu/Note.

Calculator

The Calculator can perform basic mathematical operations. Go to Menu/ Calculator to open the app.

Unit Converter

It is a smart, simple and easy to use interface to convert various units. Go to Menu/Unit

Mange your time and list of activities to plan your day ahead and increase productivity, go to Menu/Todo.

Horoscope

You can get your daily horoscope.

File Manager

Manage the contents and properties of files. You can open, delete, move, copy and rename files.

Settings

Setting the date and Time

When you first turn on your device, there is an option to update the date and time

automatically using the time provided by your network. You can't set the date, time, and time zone manually if using the automatic option.

To manually adjust the date and time settings go to Menu/Settings/Personalisation/Date

Display Settings

Go to Menu/Settings/Personalisation/ Display/Brightness to adjust the screen brightness levels.

Over-the-air Upgrade

Using the Over-the-air Upgrade tool you can update your phone's software. To access Update phone select Settings/Device/Device Information/Software Update. If you want to update the system, select Download, after it is done please select Install to complete the upgrade. Now your phone's software will be the latest version. You should turn on data connection before searching for updates. Settings for auto-check intervals is also available once you restart the phone. If you have chosen auto-check, when the system discovers the new version, the notification also will show in status bar.

Bluetooth®

Use Bluetooth® on the TT240 to connect to your headset, car or to transfer files from one phone to another. Navigate to Menu/ Settings/Network & Connectivity/Bluetooth® Switch on Bluetooth® and pair your devices, make sure the other device is set to discoverable mode.

Privacy & Security

Menu/Settings/Privacy & Security in this menu you can check app permissions, manage Internet privacy settings and set a screen lock

I am unable to add a contact in my contacts Make sure that your SIM card contacts are not full; delete some files or save the files in the phone contacts.

I can't access my voicemail

- 1. Make sure your operator's voicemail number is correctly entered.
- 2. Try later if the network is busy.

SIM card PIN locked

Contact your network operator to obtain the PUK code (Personal Unblocking Key).

The phone can't be detected by others via Bluetooth

- 1. Make sure that Bluetooth is turned on and your phone is visible to other users.
- 2. Make sure that the two phones are within Bluetooth's detection range.

Radio Frequency (RF) Exposure and SAR

This device meets international guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) radiation recommended by international guidelines (ICNIRP). These limits are part of the comprehensive guidelines and establish the permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR, Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to

operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device, SAR values may vary depending on national reporting and testing requirements and the network band. Use of device accessories and enhancements may result in different SAR values. The SAR limit for mobile devices used by the public is 2.0 w/ kg (watts per kilogram) averaged over 10 grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The highest SAR Value - 1.790 w/kg.

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Therefore, the descriptions in this manual may not exactly match the purchased product or its accessories.

The manufacturer reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

The manufacturer is not responsible for the legitimacy and quality of any products that you upload or download through this device including text, pictures, music, movies, and nonbuilt-in software with copyright protection. Any consequences arising from the installation or usage of the preceding products on this device is accountable to you.

Check out our other fantastic range of products at www.ttfone.com

fone www.ttfone.com

