

Thank you for choosing our mobile phone!  
Please read this manual before use.

Check out our website for video  
guides of how to use your phone

[www.ttfone.com](http://www.ttfone.com)

We reserve the right to upgrade the software and product and/or to make changes to this user manual without prior notice.

The icons in this user manual may slightly differ from your phone, depending on the phone you purchased. All rights reserved.

# Contents

1. Safety Instructions.....	6
2. Getting Started .....	9
3. Using the Menu .....	14
4. Your Phone.....	16
5. Making and Receiving Phone Calls .....	21
To Make Calls.....	21
To Answer Calls .....	21
Accessing the Menu during a Call.....	21
To End a Call.....	21
To Reject a Call.....	21
To Redial a Number .....	22
Making International Calls .....	22
Changing the Volume during a Call.....	22
6. Phone Book .....	23
Storing, Searching and Deleting Numbers in the Phone Book...	23
To Add a New Contact to the Phone Book.....	23
To Search for an Existing Contact .....	24
To Delete an Existing Contact .....	24
To Edit Phone Numbers for Your Speed Dial .....	24
To call a Speed Dial Number .....	25
7. SOS Emergency Button.....	25
To Deactivate SOS Sound Alarm .....	26
To Add the Emergency Contact Numbers to the Phone Book .....	27
Edit the SOS Message.....	27
8. Text Messaging (SMS).....	28
Writing and Sending a Message.....	28

Receiving/Reply to a Message.....	28
Letters and Numbers Input.....	29
Text Message Numbers.....	30
9. Accessing Your Voicemail.....	31
10. Multimedia.....	31
Camera.....	31
Image Viewer.....	31
Video Recorder.....	32
Video Player.....	32
Audio Player.....	33
FM Radio.....	34
11. Settings Other Functions.....	35
Calendar.....	35
Setting an Alarm.....	35
Phone Lock.....	36
Restore to factory Settings.....	36
Flashlight.....	37
Calculator.....	37
12. Customizing Your Settings.....	38
Profiles.....	38
Turning Off Talking Buttons (Keypad Tone).....	39
Call Settings.....	39
File Manager.....	40
Bluetooth.....	40
Pair Bluetooth Devices.....	41
13. Troubleshooting.....	42
14. Radio Frequency (RF) Exposure and SAR.....	45

# 1. Safety Instructions

This user manual includes important safety information. Please read below instructions carefully. It may be dangerous or illegal if you do not follow these instructions.



## Pay attention to Traffic Safety

Obey local traffic laws and do not use the phone while driving. Using a cell phone while driving is dangerous and it is illegal in some areas. Radio frequency (RF) signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer of your vehicle for any equipment that has been added. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area.



## Pacemaker Interference

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker in order to avoid potential interference with the pacemaker.



## Turn Off Your Cell Phone in Medical and Health Care Facilities.

Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.



## Switch Off on Airplanes

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.



## Accessories and Batteries

Use only the approved accessories and batteries. Please do not try to use with any product that was not manufactured for use with this phone. Please be sure the phone has been switched off before taking out the battery. Please dispose of scrap batteries properly according to the local regulations.



## Cell Phone Should Be Turned Off Near Sites of Explosion.

Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations and in any area with a potentially explosive atmosphere and obey all signs and instructions. Observe restrictions on the use of radio equipment in fuel depots, storage, chemical plants or where blasting operations are in progress.



## Using the Phone Correctly

Please use this phone in its normal intended position. Do not let children use the phone without supervision. Your phone contains small parts such as SIM card, which can be accidentally swallowed by a child.



## Your Phone is Not Waterproof

This phone is not waterproof. Please do not expose your phone to wet weather or environment (such as rain, snow, seawater, etc.).


## 2. Getting Started

### Remove the Back Cover

Open the battery cover by lightly pressing on the back of the phone and sliding the cover panel down.

### Install the SIM card and battery


For availability and information about using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.

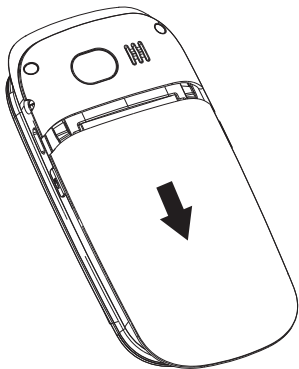

Note: The SIM card and its contacts are easily damaged by scratches or bending, so please be careful when handling, inserting, or removing the card.


Note: Keep all SIM cards out of the reach of small children.

1. Ensure the phone is switched off and the charger is disconnected before removing the battery.
2. With the back cover removed, install the SIM card by sliding it into its nest (SIM) and under the metal holding plate. Ensure the angled corner is on the lower right hand side. (To remove the SIM card, gently press on it and slide it out of its nest.) Please note you can only use a standard SIM card not a Micro or Nano SIM. You can also install a microSD memory card into the slot beside the SIM slot.

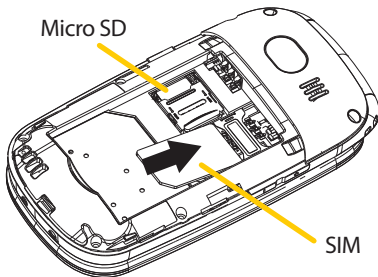




3. Install the battery into the battery slot, ensuring that the three metallic stripes on the battery align with the three metallic prongs in the battery slot.

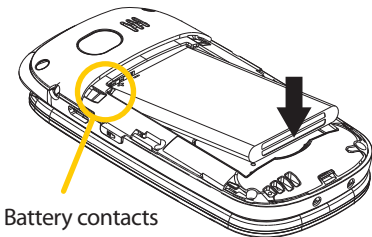


4. Put on the battery cover. Ensure the cover is completely closed and the matching sound (click) could be heard.

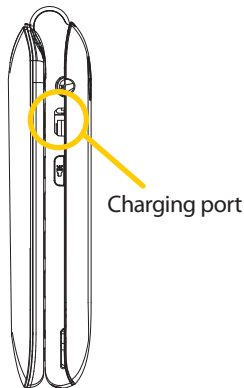


5. Plug the phone in to charge it fully. You can also use the included dock charger to charge the phone easily.




## Turning the Phone On

To turn the phone on, press and hold the  red key until the screen lights up. If you switch on the mobile phone before inserting the SIM card, it prompts you to insert the SIM card. The mobile phone checks whether the SIM card is valid automatically after it is inserted.

The following prompts appear on the screen in sequence when the mobile phone is just switching on:

- **Input phone password** - If the password of the phone has been set.
- **Input PIN** - If the password of the SIM card has been set.
- **Searching** - The mobile phone is searching for available network.
- **Language settings** - Defaults to English so just press the  right soft key to confirm.
- **Set Date** - Type in the date here DD.MM.YYYY and press the  left soft key.
- **Set Time** - Type in the time here in 24hour style and press the  left soft key.

## Turning the Phone Off

To turn the phone off, press and hold the  red key until the screen turns blank.

## Charging the Battery

The battery can be charged when the phone is either on or off. Please ensure the battery is inserted into the

phone before charging. The charging time is three hours.

To connect the charger:

1. Insert the cord into its port on the right hand side of the phone
2. Plug the charger into a 240V electrical outlet.

To disconnect the charger:

1. Unplug the wall charger.
2. Remove the cord from the phone.

### Charging Using the Docking Charger

You can also use the included docking charger for easy charging.

1. Simply plug the charger into the back of the dock
2. Place the phone into the dock to start charging.
3. Remove the phone when charging is complete.



### Battery Level Indication




EMPTY


FULL

### Low Battery Alert

The phone will sound an alert when the battery is low and display a message of low battery on the screen.

### 3. Using the Menu













In the standby state press the  left soft key to access the main menu.



Exit a menu: press the  right soft key to return to the previous menu.

Enter the standby state: press the  red key.

#### How to set Date and Time

As soon as your phone is charged, we recommend you set the date and time so you can retrieve voice messages and texts more easily.

1. Press the  left soft key to enter the menu.
2. Press the  up or down key until "Settings" appears.
3. Press the  left soft key.
4. Press the  down key until "Phone Settings" appears.
5. Press the  left soft key.
6. Press the  down key until "Date & time" appears. Press the  left soft key.
7. Press the  down key to select "Set time". Press the  left soft key.
8. Enter the time using the 24 hour clock.
9. Press the  left soft key to confirm.
10. Use the  down key until "Set date" appears.
11. Press the  left soft key.

12. Enter the date In the format DD.MM.YYYY.
13. Press the  left soft key to save.
14. To exit the settings, press the  right soft key 4 times.


**To watch instructional videos please visit and  
subscribe to our youtube channel  
[www.youtube.com/ttfone](http://www.youtube.com/ttfone)**

**Visit our support page for more information  
[www.ttfone.com](http://www.ttfone.com)**






**Buy accessories for your phone at  
[www.ttfone.com](http://www.ttfone.com)**

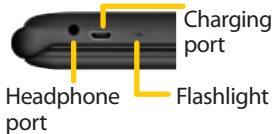









## 4. Your Phone





## Key Functions

















Key	Function
Left Soft Key 	Standby Mode: Press for main menu. Operating: Press to enter a menu.
Right Soft Key 	Standby Mode: Press for phonebook. Operating: Press to exit a menu.
Answer Key (Green Key) 	Making Phone Calls: Press to make a call or press to pick up an incoming call. Standby Mode: Press to enter call logs. Operating: Press to confirm the function. Display recent calls.
End Key (Red Key) 	Turn the Phone Off: Press and hold. Turn the Phone On: Press and hold. Operating: Press to cancel last action. End a Call. Back button to quit menu options. Return to Standby Mode.
Camera Key 	Press to take a picture with the built in camera.

<p>Navigation Arrow Key</p> 	<p>Up Arrow: Standby Mode: Press for Messages. Operating: Press to scroll up. Down Arrow: Standby Mode: Press for Alarms. Operating: Press to scroll down.</p>
<p>M1 Key</p> 	<p>Press and hold for speed dial of a set favourite number.</p>
<p>M2 Key</p> 	<p>Press and hold for speed dial of a set favourite number.</p>
<p># Key</p> 	<p>Standby Mode: Press and hold to set silent mode or press once to type the hash  symbol. Edit Mode: Press to switch typing mode.</p>
<p>* Key</p> 	<p>Standby Mode: Press once to type in the star  symbol, twice for + symbol and three times for P symbol. Edit Mode: Press to access punctuation symbols list.</p>
<p>Torch </p>	<p>Hold down to switch ON/OFF the torch.</p>
<p>SOS Button </p>	<p>Press and hold the SOS key to call and text upto five emergency numbers.</p>
<p>Volume </p>	<p>Press these to increase the volume and decrease the volume when on a call.</p>



## Icons on Screen



The following icons may be displayed on the screen:

	Silent Mode Activated
	Missed Call
	Dialling
	Alarm Set
	Bluetooth
	Hands Free Headset connected
	New SMS Text Message(s)
	Battery life
	Good Signal
	Weak Signal
	Invalid Sim or No Signal
	Roaming
	SOS/Emergency Button Enabled
	You have a Voicemail(s)
	NO Sim Card
	Vibration Mode

## Outer/Second Screen


The screen on the outside of the phone is a handy way of keeping in touch without opening the flip. In standby mode the second screen will show the time and date, the battery status and phone signal. This screen will also alert you when you get a call or message, missed call or voicemail.



## Volume Adjustment

1. During a normal or hands-free call connection, press  + or – key on left hand side of the phone to adjust the Volume.
2. During a phone call to reach maximum volume you can press the  right soft key to select "Handsfree" handsfree mode. This is an aid for users with a hearing aid.



## 5. Making and Receiving Phone Calls

### To Make Calls




1. Enter a number and Press the  green key. The screen will say "Calling" when you are dialing the number.

- To delete a digit, press the  right soft key.
- To clear the screen, press the  red key.

### To Answer Calls

When your phone rings or vibrates the outer screen will show Incoming call and will show the number of the caller. Simply open the flip to answer the call. If the flip is already open when receiving a call press either the  right soft key or the  green key to answer


### Accessing the Menu during a Call

To access the menu, press the  left soft key. Scroll up or down to the desired command by using the  up or down key and press the  left soft key again.

### To End a Call



To end a call, press the  red key.

### To Reject a Call



To reject a call without answering, press the  red key when your phone rings.

When the flip is closed you can silent the ringtone by pressing one of the volume keys on the left side of the phone.

### To Redial a Number



1. Press the green call  key, this will take you to all your recently dialed call list
2. Press the green call  button again to call the number highlighted

### Making International Calls

1. Press the  star key twice quickly until a "+" character appears on the screen.
2. Enter the country code, area code and phone number as instructed by your long distance network service carrier.
3. Press the green call  key to complete the call.

### Changing the Volume during a Call

To change the volume during a call:

- Press the  volume key on the left side of the phone up or down.
- Press the  right soft key to select "Handsfree" this will give you the loudest volume which is handy for those that are hard of hearing.











## 6. Phone Book

### Storing, Searching and Deleting Numbers in the Phone Book






Phone numbers can be stored on the phone or the SIM card. The person symbol indicates that the contact is saved in the phone. The SIM card symbol indicates that the contact is saved on the SIM card.

You can store up to 300 entries in the phone memory.








### To Add a New Contact to the Phone Book

1. Press the  left soft key to access the menu.
2. Press  up or down key until "Contacts" appears.
3. Select the option "Contacts" by pressing the  left soft key.
4. Press the  left soft key to select "Options".
5. Press the  left soft key to select "New contact".
6. Here you can select where you would like to save the number. You can choose either on the Sim card or to the phone. To select press the  left soft key.
7. Press the  left soft key to add the name, enter the name of the new contact by using the number keypad. Press a key 1 to 4 times to enter the correct letter. Press "0" for space.
8. Once the name is set, press the  left soft key to save.
9. Scroll down then press the  left soft key then enter the number then press the  left soft key then select save.



## To Search for an Existing Contact





1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Contacts" appears.
3. Select the option "Contacts" by pressing the  left soft key.
4. Scroll  up or down to search for the contact.
5. Press the  green key to make a call.






## To Delete an Existing Contact

1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Contacts" appears.
3. Select the option "Contacts" by pressing the  left soft key.
4. Press the  up or down key to find the contact that you want to delete.
5. Select the contact by pressing the  left soft key.
6. Press  up or down key until "Delete" displays.
7. Press the  left soft key twice until the contact list displays.



## To Edit Phone Numbers for Your Speed Dial

You can set up to 10 numbers for the speed dial using the number key from 2 to 9, and the  M1 key and  M2 key.


1. Press the  left soft key to access the menu.
2. Press the  up or down key "SOS" appears.
3. Select option "SOS" by pressing the  left soft key.
4. Press  up or down key until "Speed Dial" appears.

5. Press the  left soft key.
6. Scroll  up and down to choose the correct key and press the  left soft key to edit.
7. Choose a contact from the phone book.
8. Press the  left soft key to save.
9. Press the  right soft key three times to exit.

### To call a Speed Dial Number

Select the speed dial number you want to call by pressing and holding the desired speed dial number - 2 through 9,  (M1), or  (M2).

## 7. SOS Emergency Button

**Important Notice:** Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions and/or locations cannot be guaranteed. You should never rely solely on any wireless device for medical emergency communication. You can set the emergency numbers in the phone book according to your requirements; you can set a total of up to five emergency numbers. In case of an emergency, when the  SOS button is pushed down the phone will automatically send a text message to the emergency numbers set up on the phone. The mobile

phone will then make the emergency call. If the first call fails, the phone will proceed to dialling the second emergency number. In this manner the phone will circulate the emergency contact numbers three times in order to receive an answer. The phone will also sound an alarm when an emergency call or message is sent.







**Please note:** If one of the emergency numbers has a voicemail system, the phone will assume that the call has been answered and will no longer call any more of the emergency numbers.


### **Attention!**

The Emergency  SOS button will only make calls if:


1. A SIM card is in the mobile.
2. There is at least one SOS numbers programmed.
3. There is a SOS text message saved.
4. Make sure you have enough credit to make a call.

### To Deactivate SOS Sound Alarm







1. Press the  left soft key to access the menu.
2. Press the  up or down key until "SOS" appears.
3. Press the  left soft key.
4. Press the  up or down key to select "SOS Alert"
5. Press the  left soft key.
6. Select OFF by pressing the  left soft key


If no SOS numbers are stored in the phone then while pressing  SOS button it will show message "please input SOS number" also SOS will be visible on the home









screen to get rid of SOS from home screen press and hold  SOS key again.

## To Add the Emergency Contact Numbers to the Phone Book

1. Press the  left soft key to access the menu.
2. Press the  up or down key until "SOS" appears.
3. Press the  left soft key.
4. Press the  up or down key to select "SOS Numbers".
5. Press the  left soft key.
6. Choose "Contact input" to choose from your list of saved contacts or "Manual input" if you would like to type in the number.
7. Press the  left soft key to save.
8. Repeat process to add 4 other emergency contacts.










**Please Note:** Ensure the  SOS BUTTON is set to ON in order for this SOS function to work.

## Edit the SOS Message

1. Press the  left soft key to access the menu.
2. Press the  up or down key until "SOS" appears.
3. Press the  left soft key.
4. Press the  up or down key to select "Emergency SMS".
5. Press the  left soft key.
6. Edit the text of the message
7. Press the  left soft key to save.

## 8. Text Messaging (SMS)



### Writing and Sending a Message

1. Press the  UP key to shortcut to messages or press the  left soft key to access the menu.
2. Press the  up or down key until "Messages" appears.
3. Select the option "Messages" by pressing the  left soft key.
4. Press the  up or down key until "Write message" option displays.
5. Press the  left soft key and type the number you want to send the text to - **Note:** if you would like to choose a contact from your phonebook simply press the  left soft key and select the contact.
6. Press the  down key to start typing the text.
7. Press the  left soft key twice to send your message. Other options include: Insert template, Add contact info, Add emoji.

You can also access a stored message in your inbox and reply to it by selecting the option "Inbox" instead of "New Message" and following the same commands.

### Receiving/Reply to a Message


When you receive a new text message, your phone will display an envelope icon and "New Message" notification.

1. Press the  left soft key to read the message.
2. Press the  left soft key again to see a list of available commands such as "Reply", "Delete", etc.

Texting Actions	Description
Open	To view the message
Reply	To reply the message
Delete	To delete the message
Call	To call the sender
Mark	To select more messages
Sort	Sort the messages
Add sender to	Save sender to contact list
Delete repeated numbers	To delete messages form repeated numbers
Add to blacklist	To add number to blacklist

## Letters and Numbers Input




### Text Message Letters

English letters are set on number keys from "2" to "9". You can input numbers, upper or lower case letters and punctuation symbols. Pressing the  key while typing lets you switch between the different types of input modes. Each number key is set for three or four letters. Press the number key one time to display the first letter, two times to display the second letter, etc.

### Text Message Punctuation




The punctuation available includes: \ / ~ < > £ \$ ¥ § Ø @ ¤ { } ? and more

To enter punctuation:

1. Press the  key to display the list of punctuation symbols.
2. Use the  up or down keys to scroll through the list.
3. Press the  left soft key to select.

## Text Message Numbers

To enter a number instead of a letter:

1. Press the  key to switch input mode from letter to numerical and then use number keys from 1 to 0 to enter numbers.
2. Scroll up and down using the  navigation key until 123 is highlighted then press the  left soft key to select.
3. Change it back by repeating the process and this time choose Abc.

**To watch instructional videos please visit and  
subscribe to our youtube channel  
[www.youtube.com/ttfone](http://www.youtube.com/ttfone)**

**Visit our support page for more information  
[www.ttfone.com](http://www.ttfone.com)**








**Buy accessories for your phone at  
[www.ttfone.com](http://www.ttfone.com)**

## 9. Accessing Your Voicemail





Your voice mail access number has to be provided by your network carrier using your SIM card. To dial your voice mailbox, press and hold "1" on the key pad. If pressing the "1" button on your phone will not take you to your voicemail, we suggest you call your carrier and ask for your voicemail number which you can store as a fast dial on your keypad afterwards.






## 10. Multimedia

### Camera







1. Use the  camera shortcut key to directly access the "Camera" menu. **Or**  
Press the  left soft key to access the menu.
2. Press the  up or down key until "Multimedia" appears.
3. Press the  left soft key.
4. Press the  up or down key until "Camera" appears.
5. Take a photo by pressing the  camera key.  
Use the  up or down key to adjust the Zoom setting.

### Image Viewer






1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Multimedia" appears.
3. Press the  left soft key.
4. Press the  up or down key until "Image Viewer" appears.






5. Press the  left soft key.
6. Use the  M1 and the  M2 key to choose the picture from left to right the  up or down arrow key to select from top to bottom to select the picture you wish to view.
7. Press the  left soft key to choose Options. These include: View, Delete, Mark, Rename, Slide play, and Details.

## Video Recorder









1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Multimedia" appears.
3. Press the  left soft key.
4. Press the  up or down key until "Video Recorder" appears.
5. Select "Camera Key" to start recording.
6. Press "Camera Key" to pause and "Camera Key" again to resume.
7. Press the  right soft key to cancel and  left soft key to save the recording.

## Video Player





1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Multimedia" appears.
3. Press the  left soft key.
4. Press the  up or down key until "Video Player" appears.
5. Press the  up or down key to select the video you wish to view.

6. Press the  camera button to play the selected video.
- Use the  M1 key to rewind, the  M2 key to forward and the  Camera key to play and pause the video.
- Number 4 and 6 can be used to adjust the brightness and the  volume key on the left side of the phone to adjust the volume of the video.

## Audio Player

1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Multimedia" appears.
3. Press the  left soft key.
4. Press the  up or down key until "Audio Player" appears.
5. Press the  left soft key.
6. Press the  left soft key to select "List" to see your downloads.
7. Press the  up or down key to select a song.
8. Press the  left soft key.
9. Select: Play, Delete, Set as ringtone, Send or Details.






### Controls:

- To play or pause:  Camera key
- Skip to next song: Press the  M2 key
- Skip to previous song: Press the  M1 key
- Volume: the  volume key on the left side of the phone.

## FM Radio


Listen to the radio on the speaker phone or connect the headset into the headset jack.

### Turning on the FM Radio



1. Press the  left soft key to access the menu.
2. Press the  up and down key until "Multimedia" appears.
3. Press the  left soft key.
4. Press the  up and down key until "FM radio" appears.
5. Press the  left soft key.

Use the  Camera key to play/pause the radio.

### Scanning for a Station

To scan for stations, press the  M1 and  M2 keys.

### Adjusting the Volume

To adjust the volume use the  Volume Key on the side of the phone or  Up and Down Arrow Key.

### Turning the Radio Off

To turn the radio off press the  Camera Key.

\*The quality of radio sound depends on signal quality at your location.

The headphones act as an aerial so you will get better reception when they are plugged in.






**Buy accessories for your phone at  
[www.ttfone.com](http://www.ttfone.com)**



## 11. Settings Other Functions


### Calendar






To view the calendar:

1. Press the  left soft key to access the menu.
2. Press the  down key until "Organiser" appears.
3. Press the  left soft key.
4. Press  down key until "Calendar" appears.
5. Press the  left soft key.


### Setting an Alarm

You can set up to three alarms.

You can access the Alarm menu with a shortcut simply press the  down arrow key on the home screen. **Or**

1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Organiser" appears.
3. Press the  left soft key.
4. Press  down key until "Alarm" appears.
5. Press the  left soft key.




Here you can set up to three alarms.

6. Select Alarm1 by pressing the  left soft key.
7. Choose "On" to activate the alarm.
8. Choose "Edit" to edit the alarm.

In Edit mode you can choose a different alarm tone, change the time, adjust the volume and set repeat options.

## Turning off the Alarm


When the alarm sounds:

- Press the  left soft key to shut off the alarm.
- Press the  right soft key to snooze.
- With the flip closed you can press the  Volume Key on the left side of the phone to snooze the alarm.

## Phone Lock

The phone lock can prevent your mobile phone from illegal use. You can set the phone lock as On or Off and change the phone password.

Phone lock can be found in the menu Settings/Security/Phone Lock.

Press the  left soft key to access the Phone lock and input the password again to disable phone lock.



**Note: The default phone lock password is 1234. Please change into your own private password as soon as possible.**

## Restore to factory Settings

To restore the phone back to factory settings go to the menu and go to Settings/Phone settings/Restore factory settings and input the phone lock password. The default password is 1234.

## Call Logs

This option stores recently dialled calls, received calls and missed calls. Your phone can store up to 20 records for each function.

1. Press the  left soft key to access the menu.
2. Press the  up or down key to find "Call Logs".
3. Here you will be able to manage your calls:

- Missed calls
- Dialed calls
- Received calls
- Rejected calls




You are also able to delete logs and view call timers.



## Flashlight

Hold down the switch indicated by the torch icon on the right side of the phone for 3 seconds to turn on the flashlight. Hold it down again to switch off.


## Calculator

Your phone can provide basic calculator functions: addition, subtraction, multiplication and division.

1. Press the  left soft key to access the menu.
2. Press the  up or down arrows to find "Organiser".
3. Select the option "Calculator" by pressing the  left soft key.

Enter number keys to enter values. Press the  key for decimals. Use the  up or down keys or the lateral keys

to select the math operation: +, -, X, and ÷.







Press the  right soft key to clear the last digit or to exit the calculation operation.

Press the  left soft key to complete the calculation.





## 12. Customizing Your Settings

### Profiles

You can use profiles to set and customize the ring tones, message alert tones, and other tones for different events.

1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Settings" appears.
3. Press the  left soft key.
4. Press the  up or down key to find "Profiles".
5. Press the  left soft key.
6. Press the  up or down key to select from the following options:
  - **Ring type** this is where you can adjust Ringtone, Vibration, Silent, Ring & Vibrate.
  - **Ring Settings** is to change the ringtone and message notification tone.
  - **Adjust volume** this is to change the volume for all functions.
  - **Other Alert rings** - is to change the keypad tone, flip tone, start up tone etc.

## Turning Off Talking Buttons (Keypad Tone)



1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Settings" appears.
3. Press the  left soft key.
4. Choose option "Profiles".
5. Choose option "Other alert rings".
6. Choose option "Key tone".
7. Select the tone you desire (Off, Click or Human Voice).
8. Press the  left soft key to save.




## Call Settings

These features require the support of your network provider based on the calling package you select when you purchase your phone.

- Call divert - to divert call to another number
- Call waiting - to switch on/off call waiting option
- Call barring - to stop calls from a particular number (you can also use Blacklist option in the phone for this)
- Hide ID - Not show your number when calling
- Flight mode - Activate flight mode which will switch off all phone signal
- Answer mode - Choose to answer the phone by opening the flip cover or by pressing any key.







To access:

1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Settings" appears.

3. Press the  left soft key.
4. Press the  up or down key to select "Call Settings".
5. Press the  left soft key.
6. Then use this menu to update your desired settings.

## File Manager

The default file manager is your phone Micro SD card (not included).

1. Press the  left soft key to access the menu.
2. Press the  up or down key until "Organiser". Press the  left soft key.
3. Press the  up or down key until "My Files" appears.
4. Press the  left soft key.
5. Choose either "Phone" or "Memory Card".
6. Press the  left soft key. To access submenus to view or play multimedia files.







## Bluetooth

The mobile phone supports Bluetooth function. You can use Bluetooth wireless technology to set wireless connection with other compatible devices, including mobile phones, computers, headsets, in-car accessories etc. With Bluetooth function, you can send photos, video segments, audio segments, personal business card and memos. You can also establish wireless connection with a compatible PC to transmit files. Try to keep the two devices you are connecting through Bluetooth close together while they are

in use. Most Bluetooth headsets have a range of 10 meters. If possible, try to keep your phone on a chair beside you or nearby while talking on your headset to ensure the best connection. When using your computer, try putting your phone on the desk beside your monitor to ensure the best connection possible.

## Pair Bluetooth Devices

Have one of the devices "search for new devices" to find the other. Typically you want a phone to search for your headset or audio speaker rather than the other way around. The Search function is located within the Bluetooth menu in the connection settings option in your phone.

1. Press the  left soft key to enter the menu.
2. Press the  down key until "Settings" appears.
3. Press the  left soft key.
4. Press the  down key until "Connections" appears.
5. Press the  left soft key.
6. Press the  down key until "Bluetooth" appears.
7. Go to "Paired device" and locate your other device.
8. Once your phone finds the other device enter the "pairing code" for the device to link the two together. The pairing code is typically located on a sticker on the back of a headset or in the instruction book for a device.

**Note:** Ensure the power is set to ON in the Bluetooth menu

## 13. Troubleshooting

Problems	Solutions
Phone does not turn on	<ol style="list-style-type: none"><li>1. Ensure you have held the power button down for more than 5 seconds.</li><li>2. Re-insert the battery and retry turning on the phone.</li><li>3. Plug charger into the phone and ensure the battery is charged.</li></ol>
Cannot connect to a network	<ol style="list-style-type: none"><li>1. Signal strength may be weak, try moving your location and try again.</li><li>2. It may be possible that you are using the phone beyond the network service coverage area.</li><li>3. Check that your SIM card is correctly installed and is valid. (Contact your network provider)</li></ol>
No information displays when the phone is on	<ol style="list-style-type: none"><li>1. Check that your SIM card is correctly installed.</li><li>2. You may need to unlock your keypad using the button on the side of the phone or your keypad (Password maybe required).</li><li>3. You may have permanently locked your phone by entering the PIN code incorrectly 3 times. Obtain your PIN code from your network provider.</li><li>4. Increase the screen brightness in "Settings".</li></ol>



Phone call quality is poor	<ol style="list-style-type: none"> <li>1. Increase the call volume using the key on the side of the phone.</li> <li>2. It may be that the network reception is poor in your location. Try moving to another area to obtain a better connection.</li> </ol>
Shorter standby time	<ol style="list-style-type: none"> <li>1. Standby time is related to system settings. In areas of poor reception, the phone will use more battery power to try to find a base station. Reduce the standby time to save battery power.</li> <li>2. It could also be the case that the battery of the phone has become worn out. You may need to replace the battery.</li> </ol>
SIM card Error	<ol style="list-style-type: none"> <li>1. Reinstall the SIM card in the phone. Ensure the metal contacts are clean - wipe gently with a clean cloth before inserting into the phone.</li> <li>2. The SIM card may not be correctly installed.</li> <li>3. If the SIM card is damaged contact your service provider.</li> </ol>
Some features do not operate or cannot be set	<ol style="list-style-type: none"> <li>1. This could be due to an operation error on the phone. Switch the mobile phone off and restart after 30 seconds.</li> <li>2. The network provider may not support the feature you are trying to use and this may prevent its use.</li> </ol>

Cannot receive incoming calls	<ol style="list-style-type: none"> <li>1. Ensure your mobile phone is switched on and connected to a network.</li> <li>2. Ensure your SIM card is correctly installed.</li> <li>3. Call restrictions may be prohibiting incoming phone calls, so these settings must be checked.</li> <li>4. Poor areas of network coverage can prevent incoming calls so check the network status of your phone.</li> </ol>
Phone not charging	<ol style="list-style-type: none"> <li>1. Bad connections can hinder the phone charging; ensure all contacts are correctly connected.</li> <li>2. Check to see whether the phone battery charging slot or the charger itself is damaged. If so, discontinue use. Replace battery or charger.</li> <li>3. The phone cannot be charged in temperatures below 10°C or above 55°C.</li> </ol>
Does not dial numbers	<ol style="list-style-type: none"> <li>1. Confirm that once the number is entered using the keypad that the green call button is pressed to dial the phone number.</li> <li>2. Check the phone number entered is correct.</li> <li>3. Check reception coverage status of your mobile phone.</li> <li>4. Ensure the call restriction settings are correct in order for you to dial outgoing calls.</li> </ol>

## 14. Radio Frequency (RF) Exposure and SAR

This device meets international guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) radiation recommended by international guidelines (ICNIRP). These limits are part of the comprehensive guidelines and establish the permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device.

SAR values may vary depending on national reporting and testing requirements and the network band. Use of device accessories and enhancements may result in different SAR values.

The SAR limit for mobile devices used by the public is 2.0 w/kg (watts per kilogram) averaged over 10 grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The highest SAR Value - 0.351 w/kg.

Check out our other fantastic range  
Of products at [www.ttfone.com](http://www.ttfone.com)