# Enzo Pendant Technical Guide





## Introduction

Our most popular personal alarm pendant, Enzo, is a lightweight device that can be worn on the wrist or around the neck. It has a long battery life and is waterproof and shockproof.

Enzo has two-way data communication which means that the user receives a confirmation that the alarm has been received at our contact centre. When the button is pressed, the LED indicator lights up. When the alarm base unit receives the signal from the button, this is confirmed by the indicator light changing color.

Our unique Easy Press Concept (EPC) accessory makes it easy for users with restricted movement to call for assistance.

Enzo is compatible with all of Careium's current alarm base units: CareIP®Mobile, CareMobile, Eliza & Eliza S.

# Description of functions

The Enzo personal alarm pendant can be worn around the wrist or around the neck. The Easy press accessory works in both positions. You can easily switch between the different accessories.

- LED indicates transmission and battery status.
- · Range covers a normal house or flat.
- Confirmation of successful alarm transmission.
- Lithium battery for long life, up to 5 years.
- Automatic monitoring of battery and function. Careium is alerted in the event of a fault.
- Battery replaceable by authorised personnel.
- Adjustable neck strap.



## Technical data

| ENZO PERSONAL ALARM PENDANT |                            |
|-----------------------------|----------------------------|
| Frequency                   | 869.2 MHz                  |
| Water resistance            | According to IP67 standard |
| Battery                     | 1 Lithium, type CR 2032    |
| Automatic alarm test        | Yes, selectable            |
| Dimensions                  | 39 x 32 x 11 mm            |
| Article number              | 300 208                    |

Careium Enzo is also available in a variant for fixed wall mounting. For example, in the shower or on the night table.

Article number 300212.

### **Approval**



CE UK -marked. Complies with relevant standards.

#### **EU declaration of conformity**

Hereby, Careium declares that the radio equipment type is in compliance with Directives: 2014/53/EU and 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address: www.careium.com/dofc

#### **Product information**

This product is a part of a social alarm system intended to initiate a call in case of emergency or if assistance is needed.

- Frequency band: 869.200-869.250 MHz
- Radio-frequency power: max. 10 mW (10 dBm)


### **Safety information**


- The unit is waterproof for use in shower or bath (IP67).
- Battery replacement may be performed only by authorised persons.


#### **Environmental information**


This product complies with the requirements of the EU directive 2006/66/ EC (Batteries) and 2012/19/ EU (WEEE) and should not be disposed of with other household waste.

Always recycle your used electronic products, batteries, and packaging materials to dedicated collection points.

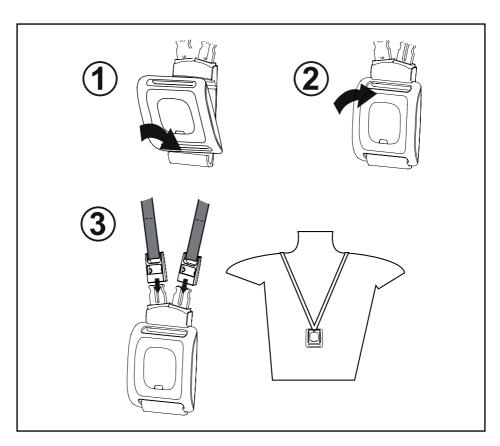

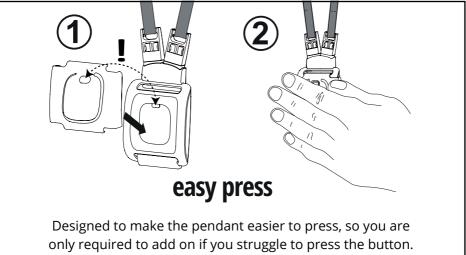

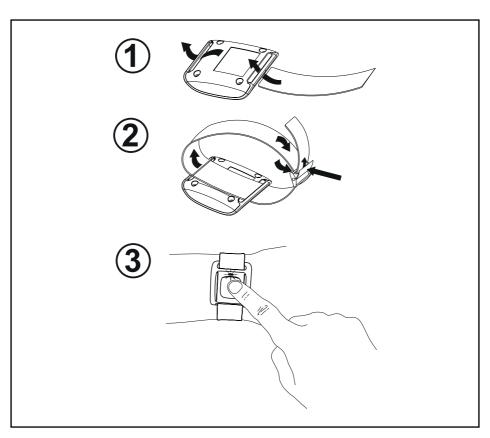

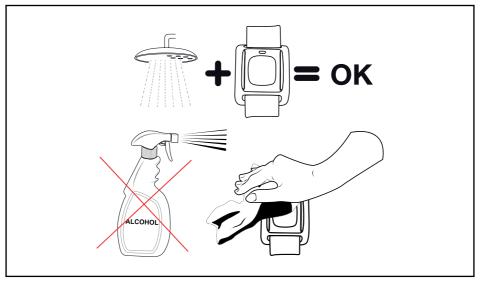

Careium Aspinall House, Walker Office Park, Blackburn, Lancashire, BB1 2QE

Call: 0300 333 6511 Visit: www.careium.co.uk Email: uk.info@careium.com

